

# Solbian User's Manual

## Solbian Solar Panel User's Manual

Thank you for purchasing a Solbian product. Our photovoltaic modules are built using innovative technology and superior quality materials. They will supply your energy needs in the harshest environmental conditions and with the versatility to suit many different applications. Please read these instructions carefully, to ensure correct utilization and a long life.

This manual is not an explicit or implicit warranty. Solbian accepts no responsibility for damage caused by the installation, use and maintenance of its products. Solbian reserves the right to modify its products, the technical specifications and this installation manual without notice.

***THE FOLLOWING INSTRUCTIONS ARE EXCLUSIVELY GENERAL ADVICE. WE RECOMMEND THAT YOU HAVE THE MODULES INSTALLED BY QUALIFIED TECHNICIANS, RESPECTING STANDARDS IEC 62548 AND 62257 AND/OR ABYC ELECTRICAL RECOMMENDATIONS. WE RECOMMEND THAT YOU CONTACT YOUR SOLBIAN DEALER FOR DETAILS CONCERNING TECHNICAL ASSISTANCE.***

### **RECOMMENDATIONS**

The following instructions must be read carefully and fully understood before proceeding with the installation, connection and use of Solbian modules. Contact with electrical components, such as terminals, can cause burns and electric shock even when the module has not yet been connected to an electrical circuit. **A photovoltaic module generates electricity as soon as it is exposed to the sun or to a source of light.** Although the electrical output of one single Solbian module is not dangerous, the connection of several modules in series or in parallel increases respectively the voltage and current. A photovoltaic system comprising of several modules can therefore generate voltages and currents which are dangerous and could be lethal. SOLBAIN will not be held responsible in any way for accidents and damage to persons, including electric shock, caused by incorrect use or installation.

### **IMPORTANT INFORMATION**

This manual contains important information about safety, which must be read carefully and understood before proceeding with the installation and use of Solbian photovoltaic modules and their accessories.

Please keep the receipt of purchase and the original packaging for the duration of the warranty.

### **WARNINGS AND ELECTRICAL RISKS**

Do not connect different models of photovoltaic modules in series or in parallel.

Check the compatibility of the charge regulator (if purchased separately) with Solbian products.

Do not modify the electrical connections of the modules, in particular do not open or remove the sealed Junction Box which joins the internal structure of the module to the external electrical connections.

Do not cut or pierce the module, this could cause live components to be exposed and/or damage the module.

Do not bend or apply excessive force to the cables.

Do not expose the photovoltaic module to direct light during installation of the system and in any case take care when the module is exposed to light. It produces current and therefore its terminals are electrically live.

The maintenance, installation, and removal of the photovoltaic modules must take place on dry surfaces.

Use exclusively tools with insulated grips.

Do not use photovoltaic modules in the presence of flammable or explosive substances.

Keep the modules in their original packaging up to the moment of their installation.

Ensure that the position of the photovoltaic modules does not cause mechanical or electrical risks.


Do not use damaged photovoltaic modules (damaged during shipping, installation or in use).

Do not apply protections, paint or varnish to the module. Contact the manufacturer for information about cleaning and protection of Solbian modules.

### **RISKS FROM MECHANICAL DAMAGE**

The photovoltaic cells contained in Solbian modules are fragile. The manufacturing technology of the modules provides protection for the cells, provided that certain precautions are taken.

Solbian modules are semi-flexible, but they cannot be rolled-up or folded. The maximum curvature allowed is 1.5 m radius. For a 1 m (39.4") long module (L), the maximum arc height is 81 mm (3.2").

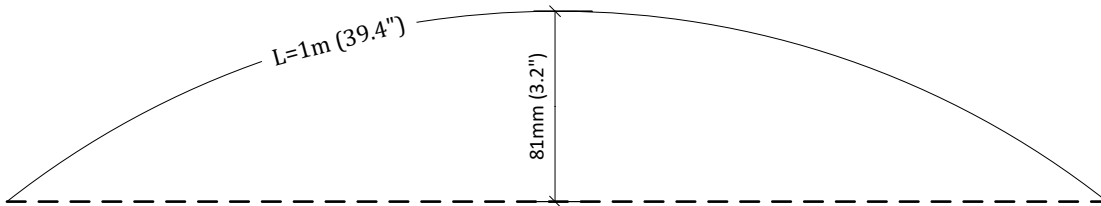

Excessive bending must be avoided when handling the modules. The module may be handled by the edge, but only if it is held vertically and without exerting excessive pressure to the edges of the cells.

Solbian modules may be walked on, but only when they are firmly mounted on a flat, smooth, rigid surface, with no bumps, hollows or irregularities. Be cautious when walking on them. You should be barefoot or wearing soft-soled shoes. Avoid heels or shoes with a rigid sole. Although the panels may be mounted on a curved surface (not exceeding the 1.5M bend radius), whatever the mounting surface, the panels must not flex when walked on.

**Uninstalled modules or modules in removable installations must not be walked on.**

If sharp or heavy objects are allowed to fall onto the modules, they can cause fractures in the cells.

If, during installation or maintenance, it is necessary to kneel on the module, it is advised to use adequate protection, to avoid damaging the cells.

### **HOT-SPOTS**

A module containing damaged cells, or even a module in good condition in which one or a small number of cells are completely shaded, can suffer from a HOT-SPOT, i.e. local overheating, even up to the point of causing the protective material to smoke and reach temperatures over 200°C (392 °F) on small areas.

In principle, this phenomenon could cause a fire, a danger which is always present where electrical apparatus is used. However, normally the damage is limited to small local burning.

**In the event of HOT-SPOTS forming, the module must be disconnected immediately.** In this way, the flow of current is stopped and further temperature rises are avoided. As an alternative, it is possible to cover the module, to avoid exposure to light. In the case of several modules connected in series, the only solution is to disconnect the module.

## **MECHANICAL INSTALLATION**

Do not bend the modules with a radius of bending less than 1.5m, otherwise the photovoltaic cells could be permanently damaged.

Solbian modules alone cannot withstand the loads caused by high winds or snow. The installation must bear in mind the structural resistance of the modules' support. The panel's structure must not be continually subjected to stress. Improper use of Solbian modules can cause irreversible damage, thereby compromising the efficiency and usage of the system.

The position of the installation should take advantage of the maximum exposure to the sunlight and the minimum shading. Remember that even partial shading of the module can cause a substantial reduction in the amount of energy produced. Do not place objects on the modules exposed to the light.

The position of Solbian modules must allow adequate circulation of air on the surfaces exposed to sunlight. This is necessary to lower the temperature and ensure high efficiency.

## **INSTALLATION WITH SCREWS**

Small Solbian panels may be attached to a rigid surface using fasteners. **For panels 100W and larger**, we strongly recommend installing with optional backside peel and stick adhesive which allows small movement of the panel during times of heat expansion. *(See section below on adhesive installation.)* **If the installation must be done with fasteners, the modules cannot be walked on and extreme care must be taken during installation to account for heat expansion.** The fasteners should be at least ¼" from the edge of the panel and any part of the cell or wiring. The hole in the panel must be 1.5 x the diameter of the fastener. Install a rubber washer and a fender washer between the panel and the screw (the order of hardware from deck is: deck>panel>rubber washer> fender washer> screw). Be sure to appropriately bed the screw to properly seal the hole while still allowing room for movement due to heat expansion. Also, be sure not to over-tighten fasteners creating excessive bend in the panel at the site of the screw. If mounting multiple panels adjacent to each other, make sure to leave a 2-3mm gap between the panels, also to allow for heat expansion.


## **INSTALLATION ON A CANVAS BIMINI OR DODGER USING VELCRO OR ZIPPERS**

Although Solbian solar panels are ideal for canvas installation, they must be fully supported for their entire area. The canvas bimini or dodger surface must be firm and sturdy, some older structures may need to be updated or re-tensioned. It is necessary to prevent any "flogging" in the wind or any excessive movement. One should be able to pull firmly on any corner of the structure and not produce much movement.

Solbian panels are “semi-flexible”, not folding or rollable. They can be mounted on curved surfaces as long as they do not exceed a bend with radius of 1.5m. Nor may they be installed in such a manner that may bend locally or have any kink, such as over a middle support bar in a bimini.

If a Solbian panel must be installed over a crossbar, and if there is any bend in the canvas surface over the bar, then a stiffening backing should be used under the panel. Typically a lightweight twin-wall polycarbonate may be used; however you should contact your distributor for information on backing material.

Zippers or Velcro may be used to attach the panels, with the Velcro option recently becoming more popular. Here is an example of a Velcro installation:

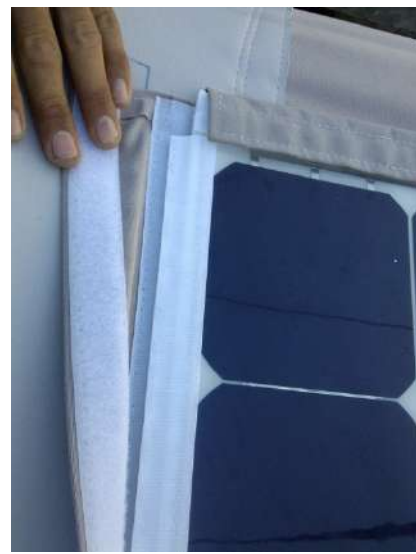

Note that the Velcro is both sewn and glued to the panel. Also note that in this case a bit more clearance could have been left between the Velcro and the cells to avoid shading the cells.

Regarding sewing, do NOT sew into the cells, stay 8-10mm (.4”) away from them. Stitching should have wide spacing. If holes are too close together, it can weaken the edge of the panel.

#### **INSTALLATION USING DOUBLE-SIDED ADHESIVE, GLUE OR DUAL-LOCK TAPE**

Before installation, the surface onto which the modules are to be installed must be perfectly clean and dry. The installation of Solbian modules using peel and stick adhesive supplied by the manufacturer must be carried out carefully and with precision (see below), as this permanent method does not allow repositioning. The surface on which the modules are installed does not necessarily need to be regular, but if it is not, the modules cannot be walked on. Similar results can be obtained with silicon or polyurethane glue. In this case, Solbian is not responsible for the results, but may be consulted about the adhesive to use.

For installation, first draw the outline of the module on the rigid surface where the module is to be mounted (roof of boat, camper, etc.). Masking tape can also be used to mark the outline of the module. If using backside wiring, position the module first and insert the cables and grommet through the holes. Then peel back part of the double-sided adhesive backing, starting from the short side nearest the electrical contacts. Now, after being sure of the right position of the module, start fixing the short side on the area, this will allow you to proceed without losing alignment. Then lift the module from the opposite side to the

one already set (without bending excessively), remove the adhesive film and proceed 20-30 cm at a time, making sure that the module adheres to the surface.


When using commercial glue, be careful not to create an irregular surface, if the modules are to be walked upon. The glue should be applied uniformly with a thickness not exceeding 2mm.

Before proceeding with a permanent installation using glue or double-sided tape, we recommend that you check the performance of the module by measuring Voc and Isc and comparing with the datasheet.

For both cosmetic reasons as well as protection of the panel edges, we recommend that the edges of the panels are sealed to the mounting surface with a sealing and bonding product such as Sika Flex. If mounting multiple panels adjacent to each other, make sure to leave a 2-3mm gap between the panels to allow for heat expansion of the panel. If the edges will be sealed as mentioned above, that will allow plenty of space for expansion.

ATTENTION: The double-sided adhesive backing tape makes a very strong bond with the support material and does not allow repositioning. Trying to remove a module, even if it is only partially attached, can seriously damage the cells. When using Dual-Lock tape, we recommend using 3M dual-lock MP3560 tape (or similar product, meant for outside use and resistant to higher temperatures) mounted with no more than 8" between each strip of tape to ensure secure attachment.

#### INSTALLATION OF MODULES WITH BACK SIDE WIRING

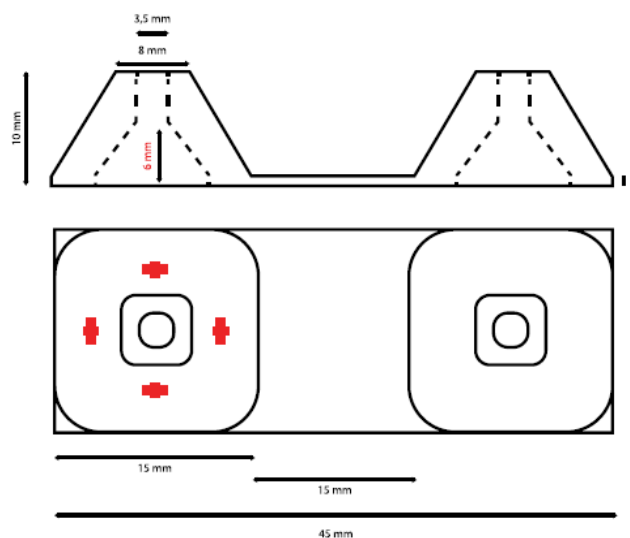

Your module may have wires exiting the back of the panel. These are electrical contacts and are therefore live when the module is exposed to light. Although the voltage is low, avoid short-circuiting the contacts for extended periods of time which could lead to arcing and overheating. For this type of installation, we

recommend that you have the modules installed by qualified marine technicians, respecting standards IEC 62548 and 62257 and/or ABYC electrical recommendations. Additionally, some of the smaller panels may not have a bypass diode wired into the panel itself. Look for a small black square on the wire strip exiting the cell(s) at the top of the panel. If no bypass diode is present, we recommend that you install a bypass diode when wiring multiple panels in series.

The cables can deteriorate due to repeated bending, so use clamps or other solutions to keep the cables fixed to the module once it is installed and the electric connections have been made.

Photovoltaic modules generate quite a high current, between 5A and 9A in full sunlight, therefore the junctions between the cables and the rest of the electrical installation must be made to high standards, to avoid overheating.

The back side wiring panels can be walkable but the installation must be performed with double-sided tape or glue, taking care to apply the module on a smooth surface. The following method is advised:

Draw the outline of the module on the rigid surface where the module is to be mounted (roof of boat, camper, etc.). Masking tape can also be used to mark the outline of the module.

Mark the position where the positive and negative cables will pass through the support. We recommend using a cardboard model of the module, with holes cut out for the cable positions. The grommet that protects the module's cables exit has the dimensions shown on the side, so to obtain a surface adhering installation it's recommended to make two 22 mm diameter holes or only one with larger dimensions (for instance 50x20 mm).

The grommet already provides the necessary electrical insulation and therefore it is not necessary to use silicone or other products to seal the hole. To avoid the risk of water stagnation and to facilitate the drying in case of splashing or condensation leave the grommet free in the hole.

See above section for additional information on adhering the panel.

#### **PROTECTIVE FILM ON FRONT OF MODULE**

The modules are shipped with a protective film on the front surface. We recommend that you remove this after the installation has been completed. In any case, the protective film **must be removed before using the module for the first time.**

**ELECTRICAL INSTALLATION:** A photovoltaic module behaves like a current generator (such as a battery) and therefore has a positive contact and a negative contact.

Normally, the module cannot supply an electrical device directly, due to the variability of the current which depends on the intensity of the sunlight. It is therefore standard practice to use the module to charge a battery, which then supplies current to the devices.

A battery may only be charged directly by the photovoltaic module if the voltage is exactly right for the chosen battery (e.g. 14V charge voltage for a 12V lead-acid battery). However, this set-up is at risk of overcharging and is inefficient. We therefore recommend the use of electronic charge controllers, which optimize the charging process. Solbian strongly recommends using charge controllers with MPPT (Maximum Power Point Tracking), in order to exploit the maximum amount of energy possible.

The cables must be of sufficient cross-section to avoid significant voltage-drop. Always use specific cable for photovoltaic installations, resistant to atmospheric agents. The cross-section (wire size) must be chosen taking into account the cable length (distance of run X 2 because it is a loop), 3% Voltage drop, and max current. The following tables show recommended wire size. Note: The SP panels have a max current of 5.5A, SR panels have a max of 8.5A and the SXp panels have a max current of 8A.

3% Voltage Drop at 12 Volts


Length	Current (Amps)												
	5	10	15	20	25	30	40	50	60	70	80	90	100
10'	3m	18	14	12	10	10	8	6	6	6	6	4	4
15'	5m	16	12	10	10	8	8	6	6	4	4	2	2
20'	6m	14	10	10	8	6	6	6	4	4	2	2	2
25'	8m	12	10	8	6	6	6	4	4	2	2	1	1
30'	9m	12	10	8	6	4	4	4	2	2	2	1	1
40'	12m	10	8	6	6	4	4	2	2	1	1/0	1/0	2/0
50'	15m	10	6	6	4	4	2	2	1	1/0	2/0	3/0	4/0
60'	18m	10	6	6	4	2	2	1	1/0	2/0	3/0	3/0	4/0
70'	21m	8	6	4	2	2	1	1/0	2/0	3/0	3/0	4/0	4/0
80'	24m	8	6	4	2	2	1	1/0	2/0	3/0	4/0	4/0	4/0
90'	27m	6	4	2	2	1	1/0	2/0	3/0	4/0	4/0		
100'	30m	6	4	2	2	1	1/0	2/0	3/0	4/0			
110'	33m	6	4	2	2	1	1/0	2/0	3/0	4/0			
120'	36m	6	4	2	1	1/0	2/0	3/0	4/0				
130'	40m	6	2	2	1	1/0	2/0	3/0	4/0				
140'	43m	6	2	2	1/0	2/0	3/0	4/0					
160'	48m	6	2	1	1/0	2/0	3/0	4/0					
180'	49m	6	2	1	1/0	2/0	3/0	4/0					
170'	52m	6	2	1	2/0	3/0	3/0	4/0					

3% Voltage Drop at 24 Volts


Length	Current (Amps)												
	5	10	15	20	25	30	40	50	60	70	80	90	100
10'	3m	18	18	18	14	12	12	10	10	10	8	8	6
15'	5m	18	18	14	12	12	10	10	8	8	6	6	6
20'	6m	18	14	12	10	10	10	8	6	6	6	4	4
25'	8m	16	12	12	10	10	8	6	6	6	4	4	4
30'	9m	16	12	10	10	8	8	6	6	4	4	4	2
40'	12m	14	10	10	8	6	6	6	4	4	2	2	2
50'	15m	12	10	8	6	6	6	4	4	2	2	1	1
60'	18m	12	10	8	6	6	4	4	2	2	1	1	1/0
70'	21m	12	8	6	6	4	4	2	2	1	1/0	1/0	2/0
80'	24m	10	8	6	6	4	4	2	2	1	1/0	1/0	2/0
90'	27m	10	8	6	4	4	2	2	1	1/0	1/0	2/0	3/0
100'	30m	10	6	6	4	4	2	2	1	1/0	2/0	2/0	3/0
110'	33m	10	6	6	4	2	2	1	1/0	1/0	2/0	3/0	4/0
120'	36m	10	6	4	4	2	2	1	1/0	2/0	3/0	3/0	4/0
130'	40m	8	6	4	2	2	1	1/0	2/0	3/0	3/0	4/0	4/0
140'	43m	8	6	4	2	2	1	1/0	2/0	3/0	3/0	4/0	4/0
160'	48m	8	6	4	2	2	1	1/0	2/0	3/0	3/0	4/0	4/0
180'	49m	8	6	4	2	2	1	1/0	2/0	3/0	4/0	4/0	4/0
170'	52m	8	6	2	2	1	1	2/0	3/0	3/0	4/0	4/0	4/0

**EXAMPLES OF INSTALLATIONS**

- a) One single module with a charge controller, battery and load. The load can be supplied directly by the controller (when the model of controller allows) or by the battery. In this arrangement, the controller needs to be able to handle the full rated current and voltage of the panel. The cable to the battery needs to be able to handle the maximum current of the controller. The fuse needs to be sized for 1.5 X the max current of the controller.

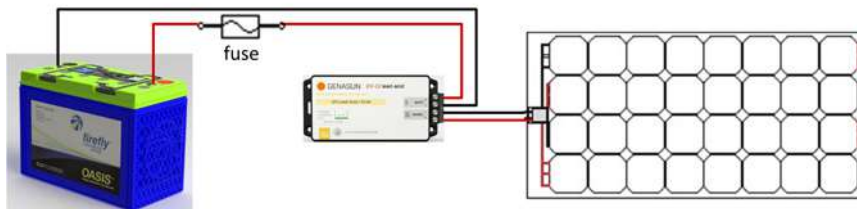


- b) With several modules, the best solution is to connect each one independently to a separate controller. The controllers can then be connected in parallel to the battery, as they are protected against reverse current. Each controller should be sized for the individual panel ratings. When the controllers are connected in parallel, the total current to the battery is the sum of each controller's max current. The size of the cable to the battery must be calculated by adding together the max currents of each controller and the fuse must be sized for 1.5 X the sum of the max currents.

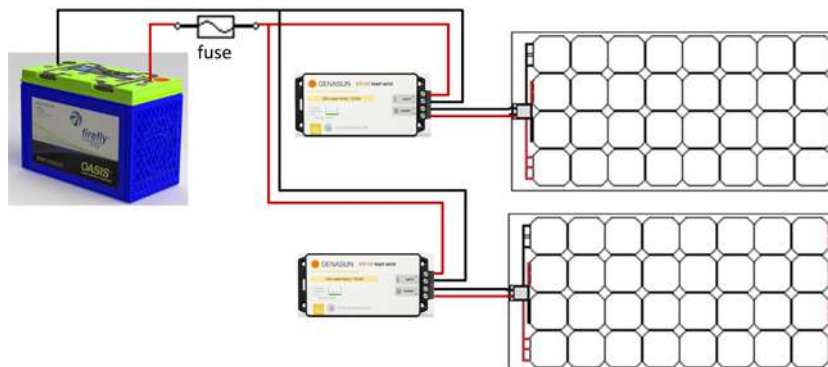




- c) Multiple modules may be connected in series to a single controller. Only modules with the same current (i.e. same cell type) can be connected in series. The controller needs to be sized for the total of all panel voltages and the current rating of an individual panel. The cabling to the battery needs to be able to handle the rated current of the controller and the fuse should be sized for 1.5 X the max current of the controller. This arrangement should only be used when shading or partial shading is NOT an issue. If any portion of either panel is shaded, it will affect the performance of the entire array.

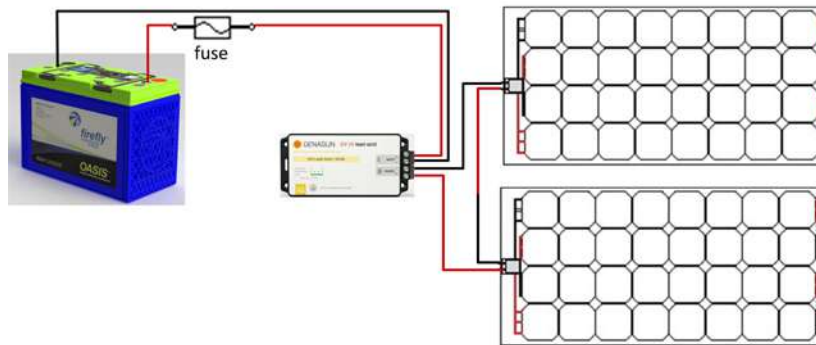


- d) Multiple panels can be wired in parallel to a single controller. This should be done when shading is anticipated and where installing one controller per panel is not possible. Only panels of the same voltage may be wired in parallel. In order to avoid wasted energy, overheating and even fires, **it is essential to use blocking diodes with parallel connections (see circuit diagram)**. Expect .7 V drop across the diodes. In this case, the controller should be sized for the voltage of the panel and the max current of all panels combined. The cabling should be sized for the max current of the controller and the fuse should be rated for 1.5 X the max current of the controller.

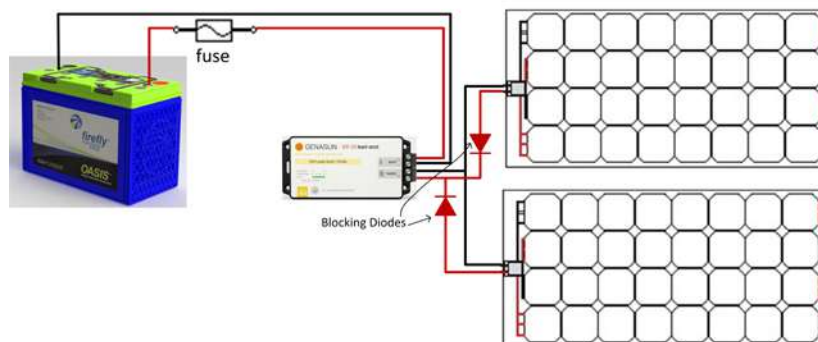

The choice of charge controller depends on the configuration of the installation, the type of modules and the battery. If you purchase your charge controller together with Solbian modules, you will receive the necessary assistance in choosing. In any case, Solbian will not be held responsible for damage or malfunctioning caused by incorrect use of charge controller, whether purchased from Solbian or not. Make sure that you read the controller's instructions very carefully.

## ASSEMBLY OF MC4 CONNECTORS

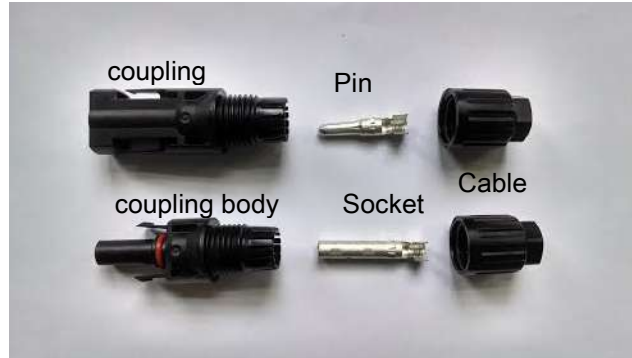

Note: The couplings supplied on Solbian solar panels are high quality industry standard MC 4 connectors. See above photo to properly match up the metal fitting with the appropriate coupling body. When making your connections, make sure that the positive (+) side of the panel is connected to the positive (+) side of the controller. ***In order to confirm the + and – cables from the panel, use a voltmeter. If the voltage reads positive, then the red side of your voltmeter is on the positive cable. If your voltmeter reads negative, then the red side of your voltmeter is on the negative cable.***

1. Unscrew cable clamp from coupling body. Inside the “teeth” on the cable side of the coupling body you should see a black rubber gland. In most cases this will be set into the teeth when you receive it. If it is separate, as shown below, set it into the coupling body inside the teeth.



2. Strip end of cable approx. 1/2” and mate it with the winged end of the pin or socket. Squeeze wings of Pin or Socket down to restrain the portion of wire that has been stripped. Then solder where the wings of the pin pinch the bare wire. Note: The insulation should not be inside the wings of the pin but should come fairly close to the wings.
3. Slide Cable Clamp over cable then push Pin or Socket into respective Coupling until it clicks into place. Pull on wire to confirm correct engagement.
4. Tighten Cable Clamp on to Connector body.

## MAINTENANCE OF THE PHOTOVOLTAIC SYSTEM

Due to the absence of moving parts, the required maintenance is minimal. The following instructions are important:

Keep the modules clean. Ensure there is nothing on the panel that could cause any shading on any of the cells as this can cause loss of output and excess heat that can damage the panel if extreme. Wash with fresh water, especially in a marine environment, to avoid damage caused by saltwater. The surface of the

modules may be cleaned using neutral soap and water, wiping carefully and without using abrasive material. Denatured alcohol (methylated spirit) can be used to remove grease etc. When panel is clean and dry, apply a coating of a plastic protectant such as "RejeX" or Novus plastic cleaner #1- available at your marine chandlery or online. If contaminants build up or oxidation occurs over time, it may be necessary to polish the panel. The recommended polisher is Novus brand polish, #2 (Fine scratch remover). It is recommended that you hand polish the panels as a power polisher could burn the surface with too much friction. Follow the instructions on the product label.

Check the structural integrity of the installation and the electrical connections periodically.

Check the efficiency of the system using the monitoring functions in the charge regulators (LEDs or displays).

### **POSSIBLE FAILURE MODES**

Fractured cells- Fracturing can be caused by excessive bending of the module during installation or use, or by impact or mechanical stress. Fractured photovoltaic cells do not normally cause a total loss of performance in a module, but more usually a drop in efficiency. A module with fractured or malfunctioning cells can be detected by measuring the current using a 10A ammeter. In full sunlight, the current should be the same order of magnitude as the **Isc** of the module (see datasheet), e.g. above 5A for the SP series modules. The voltage is barely affected by cell fracture.

Water inside the junction box- Although the junction boxes are waterproof, infiltrations are possible due to manufacturing defects or impact. If this occurs, remove the cover of the junction box and proceed to dry the inside.

Defects with the charge controller- Charge controllers, like all electronic devices, can fail. The display, if there is one, may indicate failure. In any case, the first step is to check the state of the electrical connections between modules, controllers and batteries.

### **EXCERPT FROM WARRANTY TERMS**

Solbian modules are covered by a warranty for manufacturing defects and performance. Here are some of the warranty conditions. The text of the full warranty (the sole applicable warranty) is available on request and is published on the website [www.solbian.eu](http://www.solbian.eu)

#### **Limited Product Warranty - Five Years Repair, Replacement or Refund Remedy**

SOLBIAN warrants its Photovoltaic Solar Modules (MODULES), including factory-assembled DC connectors and cables, if any, to be free from defect in materials and workmanship under normal application, installation, use and service conditions. If MODULES fail to conform to this warranty, during the period ending Sixty (60) months from the date of sale to the customer of the SOLBIAN product (CUSTOMER), SOLBIAN will, at its option, either repair or deliver a new product, or refund the purchase price as paid by the CUSTOMER (SALES DATE). The repair or deliver or refund remedy shall be the sole and exclusive remedy provided under the "Limited Product Warranty" and shall not extend beyond the Sixty (60) months period set forth herein. This -Limited Product Warranty- does not warrant a specific power output, which shall be exclusively covered under clause 2 hereinafter (Limited Peak Power Warranty).

#### **Limited Peak Power Warranty - Limited Remedy Five years**

If, within a period of (5 ) five years from the Sales Date any MODULE(s) exhibits a power output less than 85 % of the minimum- Peak Power at STC - as specified as of the Sales Date in SOLBIAN Flash Report, provided that such loss in power is determined by SOLBIAN ( at its sole and absolute discretion ) to be due

to defects in material or workmanship, SOLBIAN will, at its sole option, either (1) replace such loss in power by either (a) providing additional MODULES to the CUSTOMER to make up for such loss in power or (b) replacing the defective MODULE(s) at the option of SOLBIAN or (2) refund the percentage of the cost of the MODULE (as measured by the then prevailing market price for similar MODULES) to the CUSTOMER representing the percentage of the power output less than 85% of the minimum -Peak Power at STC - as specified as of the Sales Date in SOLBIAN Flash Report.

The remedies set forth in this clause 2 shall be the sole and exclusive remedies provided under the –Limited

#### **RECYCLING AND DISPOSAL**

Solbian is part of the European consortium PV-CYCLE, for the recycling of damaged or end-of-life modules, available in many European countries. Solbian photovoltaic modules are electrical apparatus and must be disposed of accordingly, according to the laws of the country. In case of disposal requirements, please contact our sales department.